 
 


61 系列机械键盘使用说明书

 
键盘简介

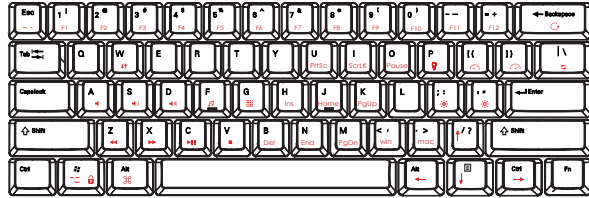

61 键盘板框图



Type-C Cable



尺寸	290mm*100mm*40mm
布局	61键位
背光	RGB
箱体	机械箱体

背光控制及相关特殊功能

组合功能

FN+W 【/?、ALT、MENU、CTRL】 切换成方向键

Fn + Win 锁定 win

Fn + U	PrtSc	Fn + I	ScrLK	Fn + O	Pause
Fn + H	Ins	Fn + K	Home	Fn + J	PgUp
Fn + B	Del	Fn + M	End	Fn + N	PgDn

背光组合键

Fn + I\	灯光效果切换	Fn + P	关闭/打开 背光灯
Fn + *	灯光亮度 +	Fn +]	灯效频率 +
Fn + ;:	灯光亮度 -	Fn + [	灯效频率 -
Fn + Tab	RGB 切换灯光颜色		

WIN / MAC 模式及多媒体功能

WIN 系统 FN+,<: 切换到 WIN 系统

Fn + 1	F1	Fn + 5	F5	Fn + 9	F9
Fn + 2	F2	Fn + 6	F6	Fn + 0	F10
Fn + 3	F3	Fn + 7	F7	Fn + -	F11
Fn + 4	F4	Fn + 8	F8	Fn + =+	F12

MAC 系统 FN+. >: 切换到 MAC 系统.双击Fn (FN快闪)

- 1 - 降低显示器的亮度
- 2 - 提高显示器的亮度
- 3 - 开放式任务控制
- 4 - 搜索功能 (仅适用于兼容笔记本电脑)
- 5 - 语音识别 (仅适用于兼容笔记本电脑)
- 6 - 休眠 (长按, 仅适用于兼容笔记本电脑)
- 7 - 跳回 (音频)
- 8 - 暂停/播放 (音频)
- 9 - 向前跳过 (音频)
- 0 - 静音
- - 音量减小
- =+ - 音量增加

长按 Fn+Backspace 5秒以上
恢复默认出厂设置。整个背光快速闪烁作为恢复确认。

有线/无线模式操作

2.4G/3.0/5.0 (仅仅在三模版本键盘下使用的功能说明)

FN+Q ~ 2.4G (先长按5秒以上, 再插适配器)
FN+E ~ M1 FN+R ~ M2 FN+T ~ M3 FN+Y ~ Line

搜索时指示灯快闪, 未连接状态指示灯慢闪
长按组合键5秒以上为搜索模式, 连接完成后, 后期使用只需要按对应的组合键

低电压指示:

Tab键右上角为指示灯;
低电压的时候, 显示红灯快闪;
充电情况下, 显示蓝灯慢闪, FN+L可以关闭此指示灯;
充满电时, 显示绿灯常亮, FN+L可以关闭此指示灯;

 
指示灯:

指示灯包含键位: <、>、win、方向键、WASD、Q、E、R、T、Y
其中 Q、E、R、T为无线状态下的指示灯, Y指示连接有无线, 此指示灯适用双模或者三模;
按FN, 指示灯显示快闪, 方便查看对应位置的指示;


- 带有USB接口的电脑
- PC: windows 8 或者更高版本
- MAC: macOS X 10.6 Snow Leopard 或更高版本

61 Series mechanical keyboard
USER MANUAL

INTRODUCTION

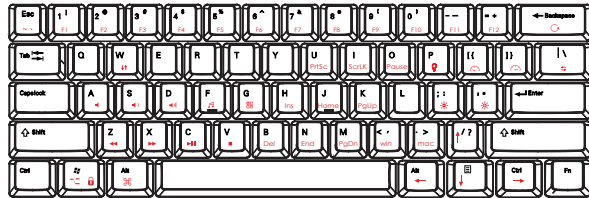

61 keyboard layout

 

Type-C Cable



Size	290mm*100mm*40mm
Layout	61Key
Backlight	RGB
Switch	Mechanical Switch

BACKLIGHT CONTROL & SPECIAL FUNCTION KEYS

Function Key Switch

PRESS FN+W 【/?、ALT、MENU、CTRL】 Switch to directional keys

Fn + Win Lockup win

Fn + U	PrtSc	Fn + I	ScrLK	Fn + O	Pause
Fn + H	Ins	Fn + K	Home	Fn + J	PgUp
Fn + B	Del	Fn + M	End	Fn + N	PgDn

BACKLIGHT CONTROL

Fn + I\	Switch Backlight Mode	Fn + P	Backlight On/Off
Fn + *	Backlight Brightness +	Fn +]	Backlight Speed +
Fn + ;:	Backlight Brightness -	Fn + [	Backlight Speed -
Fn + Tab	RGB Toggle light color		

WIN / MAC MODE & MULTIMEDIA

WIN system FN+,<: switch to WIN system

Fn + 1	F1	Fn + 5	F5	Fn + 9	F9
Fn + 2	F2	Fn + 6	F6	Fn + 0	F10
Fn + 3	F3	Fn + 7	F7	Fn + -	F11
Fn + 4	F4	Fn + 8	F8	Fn + =+	F12

MAC system FN+. >: switch to MAC system.Double click Fn (FN flash)

- 1 - Decrease display brightness
- 2 - Increase display brightness
- 3 - Open Mission Control
- 4 - Search function (On compatible notebooks only)
- 5 - Speech recognition (On compatible notebooks only)
- 6 - Dormancy (Long press, On compatible notebooks only)
- 7 - Skip back (Audio)
- 8 - Pause / Play (Audio)
- 9 - Skip forward (Audio)
- 0 - Mute
- - Volume down
- =+ Volume Up

Press Fn+Backspace for 5 seconds
Restore the default settings . The whole backlight flashes quickly.

WIRED & WIRELESS MODE

2.4G/3.0/5.0 (Wireless mode is only applicable to the third mock examination keyboard)

FN+Q ~ 2.4G (Used in conjunction with adapters)
FN+E ~ M1 FN+R ~ M2 FN+T ~ M3 FN+Y ~ Line

The search indicator light flashes quickly, and the unconnected indicator light flashes slowly.
Long press and hold the combination key for more than 5 seconds as the search mode.
After the connection is completed, you only need to press the corresponding combination key for later use

Low voltage indication:

The upper right corner of the Tab key is the indicator light.
When the voltage is low, the red light flashes quickly.
When charging, the blue light flashes slowly, FN+L Turn off this indicator light.
When fully charged, the green light remains on, FN+L Turn off this indicator light.

Indicator light:

Include: <、>、win、Direction keys、WASD、Q、E、R、T、Y
Inside Q、E、R、T it is an indicator light in wireless mode, Y~wired, (Suitable for wireless versions).
Press FN, indicator light flashing quickly, Convenient to view the corresponding position indication.

- Computer With Available USB port
- PC: Windows 8 or Later
- Mac: macOS X 10.6 Snow Leopard or Later